

Nokia




DC2.0

**NOKIA**



1200  
1208  
1209  
1650  
2600 Classic  
2630  
2680 Slide  
2760  
3109 Classic  
3110 Classic  
3110 Evolve  
3120 Classic  
3250  
3500 Classic  
3600 Slide  
5000  
5070  
5200  
5220  
5300  
5310  
5320  
5500  
5610  
5700  
5800 Xpress Music  
6070  
6080  
6085  
6086  
6101  
6103  
6110 Navigator  
6111  
6120 Classic  
6124  
6125  
6131  
6136  
6151  
6210 Navigator  
6212 Classic  
6220 Classic  
6233  
6234  
6267  
6270  
6280



		6288 6290 6300 6300 6301 6500 Slide 6555 6600 Fold 6650 Flip 7070 Prism 7210 Supernova 7310 Supernova 7360 7370 7373 7390 7500 Prism 7510 Supernova 7610 Supernova 8800 Sirocco E50 E51 E51 ( No Camera ) E61 E61i E65 E66 E71 E72 E75 E90 N70 N71 N72 N73 N76 N78 N79 N80 N81 N82 N90 N91 N92 N93 N93 N95 N95 8GB N96 PT-6
--	--	--


		FUJI Fine pix 4700

SAMSUNG	G600	SAMSUNG F110 MiCoach F200 F210 F250 F400 F480 Tacco F490 F700 G600 G800 G810 i200 i780 J700 L760 M110 Solid M310 P260 P520 Armani U900 Soul i900 Omnia
MINI USB 	V3	MOTOROLA A668 A780 A1200 E6 E680 E680i E770v L2 L6 L6i L6g L7 K1 KR ZR U6 PEBL V3 RAZR V3i RAZR V3x RAZR

	<p>V320  V360  V191  W375  <b>RIM Blackberry</b> Full Series  Skype Netgear 5PH101  <b>MILO</b>  Digi Walker  168  268  269  269  336BT  336g  336i  339  8390  8870  A201  A701  C51E  C710  P350  P550  <b>PANASONIC</b>  Camera Lumix DMC-FX01  <b>T Mobile</b> SDA-11</p>
MICRO USB	<p><b>MOTOROLA</b>  RAZR2  V8  V9  V9m  Q9  Q9h  Q Global  <b>NOKIA</b>  6500 Classic  8600 Luna  7900 Prism  8800 Arte  8800 Sapphire  Arte  N85  <b>LG</b>  AX300  AX830  EnV2  LX400  UX300  UX830</p>

		VX8610 Decoy <b>SANYO</b> S1 Katana LX <b>KYOCERA</b> E2000 Tempo <b>BLACKBERRY</b> PRO STORM
LG 	CHOCOLATE TE	<b>LG</b> LG: KC550 KC910 Renoir KE800 Chocolate Platinum KE850 Prada KE970 Shine KF300 KF600 Venus KF750 Secret KG320 KG800 Chocolate KG810 KU990 Viewty
	DC4.0	<b>CREATIVE ZEN</b> MuVo 2 FM Zen Zen PMC Zen, Sleek Zen Touch Zen Vision <b>SONY</b> <b>PSP</b> <b>CANON</b> 750 V3 <b>OLYMPUS</b> C-450 zoom U-10D D-15D D-20D D-25D D-30D D-300D D-400D D-410D X-1 X-2 X-3 AZ-1 C-50Z C-60Z

		Dell Axim X3X5
<p>FEMALE USB</p> 		For general charging where electronic device is supplied with USB charging cable.
<p>SONY ERICSSON</p> 	K750i	<p><b>SONY</b> <b>ERICSSON</b></p> <p>D750i HBH-GV435 J100i J220i J230i K310i K510i K610i K750 K750i K790i K800 K800i K810i K850i M600 M600i P990 P990i S600i V630 W300i W550i W700i W710i W800i W810i W850i W880i W900i W950i</p>

		Z520 Z520i Z530i Z550i Z558i Z610i Z710 Z710i
APPLE 	I-POD	APPLE I-pod I-phone (Excluding the Shuffle and firewire versions)