













<i>phone connectors (Supplied)</i>	<i>Suitable for</i>
	All LG Chocolate (KG800) Series Phones LG KG800 Chocolate, LG KG810, LG KG320
	Motorola® phones with the Square connector A630, A830, A835, A920, A925, A1000, C331 and C332 (TDMA versions), C333 (CDMA with antenna), C341, C343, C353 (TDMA), C975, E310, E550, E1000, MPx220, ROKR, T280i, T300p, T720, T720i, T721, T721i, T722i, T730, T731, V70, V260, V262, V265, V300, V400, V500, V505, V525, V545, V547, V550, V551, V600, V620, V635, V710, V810, V975, V1050, V60, V60i, V60c, V60p(PTT), V60s, V60t, V60t Colour, V60g, V60x, V66, V66i, V120c, 120t, 120x, 120c, 120e, 270c, 280, phones and V200 Personal Communicator.
	All older Nokia mobile phone and other devices using the 3.5mm jack. 1100, 1110, 1221, 1260, 1261, 1600 2260, 2270, 2285, 2300, 2600, 2650, 3100, 3105, 3108, 3120, 3200, 3220, 3230, 3285, 3300, 3350, 3360, 3361, 3390, 3395, 3510, 3510i, 3520, 3530, 3560, 3570, 3585, 3585i, 3586, 3586i, 3588i, 3589i, 3590, 3595, 3600, 3620, 3650, 3660, 5100, 5140, 5140i, 5210, 5510, 6020, 6021, 6030, 6060, 6100, 6108, 6170, 6200, 6220, 6225, 6230, 6230i, 6260, 6310, 6310i, 6340, 6340i, 6360, 6370, 6385, 6510, 6560, 6585, 6590, 6590i, 6600, 6610, 6610i, 6620, 6630, 6650, 6670, 6680, 6681, 6800, 6810, 6820, 6822, 7200, 7210, 7250, 7250i, 7260, 7270, 7280, 7600, 7650, 7700, 7710, 7600, 7610, 7650, 8260, 8265, 8265i, 8270, 8290, 8310, 8390, 8800, 8910, 8910i phones, 9210i Communicator, 9290 Communicator, 9300, 9500 Communicator, N-Gage and N-Gage QD
	New Nokia Mobile Phones including the N series N70, N71, N72, N73, N80, N80ie, N90, N91, N918GB, N92, N93, E61, E62, 770, 2865i, 3155i, 3250, 5500, 6070, 6080, 6101, 6102, 6102i, 6103, 6111, 6125, 6126, 6131, 6133, 6136, 6151, 6155i, 6165i, 6233, 6265i, 6270, 6280, 7360, 7370
	Samsung® Wide flat connector SCH-A210, SCH-A310, SCH-A399, SCH-A475, SCH-A505, SCH-A509, SCH-A530, SCH-A539, SCH-A563, SCH-A564, SCH-A570, SCH-A591, SCH-A592, SCH-A595, SCH-A599, SCH-A610, SCH-A650, SCH-A670, SCH-A670, SCH-A795, SCH-A809, SCH-N181, SCH-N181, SCH-N182, SCH-N191, SCH-N195, SCH-N288, SCH-N330, SCH-N370, SCH-N375, SCH-X199, SCH-X209, SCH-X309, SCH-X319, SCH-X359, SGH-A200, SGH-A288, SGH-A300, SGH-A308, SGH-A400, SGH-A408, SGH-A500, SGH A561, SGH-A608, SGH-A800, SGH-C100, SGH-C130, SGH-C207, SGH-C225, SGH-C417, SGH-D100, SGH-D307, SGH-D347, SGH-D357, SGH-D407, SGH-D415, SGH-D500, SGH-D600, SGH-D800, SGH-E100, SGH-E105, SGH-E300, SGH-E315, SGH-E316, SGH-E317, SGH-E330, SGH-E330N, SGH-E350, SGH-E335, SGH-E370, SGH-E400, SGH-E600, SGH-E630, SGH-E635, SGH-E700, SGH-E710, SGH-E715, SGH-E760, SGH-E770, SGH-E800, SGH-K528, SGH-N200, SGH-N400, SGH-N500, SGH-N620, SGH-N625, SGH-N628, SGH-P107, SGH-P207, SGH-P400, SGH-P408, SGH-P510, SGH-P735, SGH-Q100, SGH-Q200, SGH-Q208, SGH-Q300, SGH-R200, SGH-R208, SGH-R210, SGH-R210S, SGH-R220, SGH-R225, SGH-R225M, SGH-S100, SGH-S200, SGH-S208, SGH-S300, SGH-S300M, SGH-S307, SGH-S308, SGH S500, SGH-T100, SGH-T108, SGH-T200, SGH-T208, SGH-T209, SGH-T309, SGH-T319, SGH-T410, SGH-T400, SGH-T408, SGH-T500, SGH-T609, SGH-T619, SGH-T709, SGH-T719, SGH-V100, SGH-V200, SGH-V205, SGH-V206, SGH-X100, SGH-X105, SGH-X426, SGH-X427, SGH-X427M, SGH-X450, SGH-X460, SGH-X475, SGH-X480, SGH-X495, SGH-X497, SGH-X507, SGH-X600, SGH-X640, SGH-X660, SPH-A420, SPH-A580, SPH-A640, SPH-A900, SPH-M500, SPH-T100
	Samsung® Small Thin connector SGH-D520, D800, D820, D830, D840, D900, E250, E390, E500, E570, E780, E870, E900, P300, P310, X820, X830, Z400, Z400v, Z510, Z520, Z530, Z540, Z540v, Z560, Z720, ZV40
	Sony Ericsson® Wide connector D750i, J100a, J100c, J100i, J220a, J220c, J220i, J230c, J230i, K310a, K310c, K310i, K320i, K510a, K510c, K510i, K610i, K610im, K750c, K750i, K758c, K790a, K790c, K790i, K800i, M600i, M608c, P990i, V630i, W300c, W300i, W550c, W550i, W600c, W600i, W700c, W700i, W710c, W710i, W800i, W810c, W810i, W830i, W850i, W900c, W900i, W950i, W958c, Z520a, Z520c, Z520i, Z525a, Z525i, Z530c, Z530i, Z550a, Z550c, Z550i, Z558c, Z558i, Z610i, Z710c, Z710i, J220i, K618i, M600i, W800c, W830c

<p>Sony Ericsson® (Small connector)</p> 	<p>Sony Ericsson® Small connector</p> <p>A2218z, A2618, A2618s, A2628, A3618s, F500i, J210i, J300i, K300i, K500i, K508i, K600i, K608i, K700i, P800, P900, P910i, R300d, R300LX, R300z, R320, R320s, R380 WORLD, R380e, R380s, R520m, R600, S700i, T20e, T20s, T28 WORLD, T28z, T29, T29s, T39m, T60c, T60d, T61c, T61d, T61LX, T61z, T62u, T65, T66, T68, T68i, T100, T105, T200, T226, T230, T290i, T300, T306, T310, T316, T600, T610, T616, T620, T630, V600i, V800, Z200, Z300i, Z600, Z800i, Z1010</p>
<p>4mm straight jack</p> 	<p>Universal 4mm straight jack for</p> <p>Sony PSP® Sony PSP portable games system</p> <p>Creative Zen™ ZEN, ZEN Touch, ZEN Vision, ZEN Vision:M, MuVo², MuVo² FM</p> <p>TOM TOM® GO, GO 300, GO 500, GO 510, GO 700, GO 710, GO 910</p> <p>Two way radios Allows you to power many Two way radios that charge via a 4mm jack</p> <p>Camera's Allows you to power many digital cameras that charge via a 4mm jack</p>
<p>Mini USB</p> 	<p>Various phones and devices</p> <p>Smart Phones (orange) SPV C500, SPV C550, SPV M500, SPV C600, SPV M600 and SPV M3000</p> <p>HTC Phones MT600, P3300, P3600, P4350, S620, TyTN</p> <p>I-Mate Phones JASJAR, SP3, SP3i, SP4m, JAMin, K-Jam and Jam</p> <p>O2 XDA Phones XDA Exec, XDA Mini Pro, XDA Mini S, XDA SP, XPhone II and XPhone II m</p> <p>T-Mobile Phones MDA Vario, MDA Vario with Co-Pilot, MDA, MDA Pro, MDA Compact II, SDA, SDA Music and Dash</p> <p>Motorola® A780, E1070, E770v, KRZR K1, L2, L6, L7 i-mode, MPx200, PEBL V6, RAZR maxx V6, RAZR V3, RAZR V3i, RAZR V3x, RIZR Z3, SLVR L7, U6, V235, V360, V360v</p> <p>Qtek Phones 8010, 8020, 9100, 9000, S100, S110 and S200</p> <p>Blackberry™ 6210, 6220, 6230, 6280, 6510, 7100g, 7100i, 7100r, 7100t, 7100v, 7100x, 7105t, 7130e, 7210, 7230, 7250, 7270, 7280, 7290, 7510, 7520, 8100 (Pearl), 8700c, 8700f, 8700g, 8703e</p> <p>Other devices using the mini USB connector</p> <p>iRiver™ T10 series, T30 series, PMP-100 series, PMC-100 series, H300 Series, iGP-100, iFP-1000 series, iFP-900 series, iFP-800 series, iFP-700 series, iFP-300 series, N10</p> <p>Garmin® Forerunner 205, Forerunner 203, Forerunner 301, Edge 205, Edge 305</p> <p>Mio Technologies (Digi Walker®) Various Mio satellite navigation units that charge via Mini-USB</p> <p>Camera's Allows you to power many digital cameras that charge via their Mini-USB port</p> <p>Bluetooth head sets Allows you to power many Bluetooth head sets that charge via their Mini-USB port</p>
<p>USB female</p>	<p>For use with devices that can be charged via USB on your computer. Simply connect the cable supplied with your device to this connector. Examples below</p>
	<p>iPod® iPod® (10Gb, 20Gb, 30Gb, 60Gb) iPod® Video (30Gb, 60Gb) iPod® nano (1Gb, 2Gb, 4Gb) iPod® Shuffle (512Mb, 1Gb)</p> <p>Microsoft Zune® Microsoft Zune 30Gb</p> <p>Sony Walkman® 6Gb Sony Walkman, 8Gb Sony Walkman, 20Gb Sony Walkman</p> <p>Creative Zen™ ZEN V Plus, ZEN V, ZEN Micro, ZEN MicroPhoto, ZEN Neeon, MuVo Slim</p>
<p>NDS power connector</p> 	<p>Dedicated Nintendo DS® lite handheld Connector</p> <p>Nintendo DS lite handheld games system</p>